

# OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS

FOR OMEGA ALTISE OAFH2000W



OAFH2000W

omega  
*altise*

## IMPORTANT SAFETY INSTRUCTIONS

**IMPORTANT:** Read the safety precautions of this booklet carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your heater or these instructions, please contact Omega Altise on 1300 795 572 in Australia or (09) 415 6000 in New Zealand before operating your appliance.


1. Read all instructions carefully before using the heater.
2. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons. Do not modify this appliance.
3. Remove the package and ensure that the appliance is undamaged (keep packing box for later storage). In case of doubt do not use the appliance and contact Omega Altise Service. Do not let children play with any parts of the packaging.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the heater is used by or near children or individuals with decreased mental and physical capacity and whenever the heater is left operating unattended.
5. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home. The appliance must be connected to a grounded power supply.
6. Avoid using extension cords as the extension cord may overheat and cause a risk of fire. If the use of an extension cord cannot be avoided, always use one with a minimum rating of 13Amps. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
7. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out.
8. Do not run power cords under rugs or other combustible materials. Do not place power cords in areas where they can be a tripping hazard. Do not operate directly below a power outlet.
9. Do not insert any objects into the heater as it may cause an electric shock or fire or damage to the heater. Do not block or tamper with the heater in any manner while it is in operation. To prevent a possible fire, do not cover the appliance in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
10. Do not leave the heater unattended. Always unplug the heater when not in use.

**WARNING:**  The Main Power Switch and On/Off switches should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.

11. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use the handle when moving the heater (where available) or hold on the sides if not available (make sure the unit is turned off). Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 1m from the heater to the sides, front, rear & top.
12. The heater has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden, corrosive, salty or wet atmospheres. This heater is intended for general indoor domestic use ONLY.
13. This heater is not intended for use in wet or damp locations. Never locate a heater where it may fall into a bathtub or other water container.
14. Do not use the heater outdoors
15. This heater includes a tilt switch that turns the heater off if it falls over. Once righted, the heater will completely reset and can be used as normal.
16. This heater includes an audible alarm to warn that parts of the heater are getting excessively hot. If the alarm sounds, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures.

**WARNING:**  To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by a special cord or assembly available from Omega Altise Service. In order to avoid overheating, do not cover the heater. The heater must NOT be located immediately below a socket outlet. Do not use the heater in the immediate surrounding of a bath, shower or swimming pool.

## GENERAL HEATER PARTS

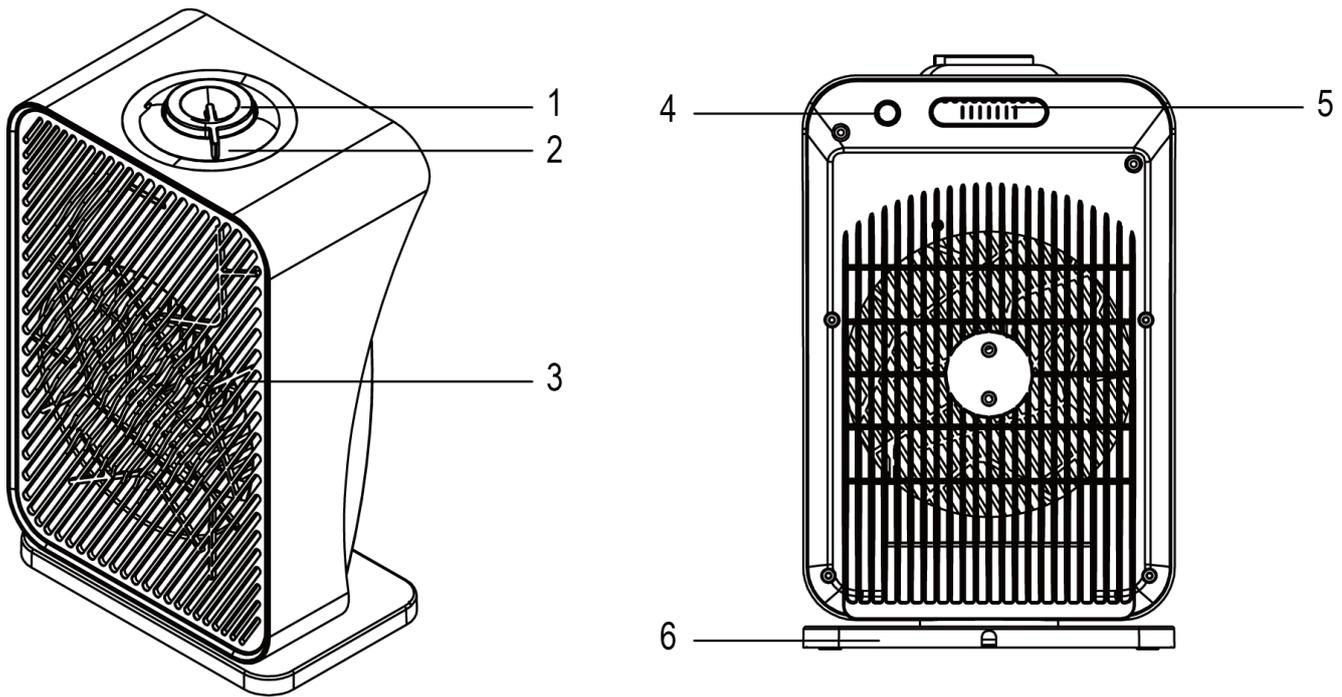

- |                |                         |
|----------------|-------------------------|
| 1. Switch knob | 4. Oscillating function |
| 2. Thermostat  | 5. Handle               |
| 3. Front grill | 6. Base                 |

## GETTING STARTED

1. Carefully remove the heater from the plastic bag and the carton.
2. Place the heater on a stable and flat surface.
3. Set the main power switch to the 'OFF' position. Plug the cord set into a 240V~A.C. 50Hz earthed electrical outlet.

## OPERATING INSTRUCTIONS


## FUNCTIONS

OFF

Fan without Heater

Fan with 1000W Heater

Fan with 2000W Heater

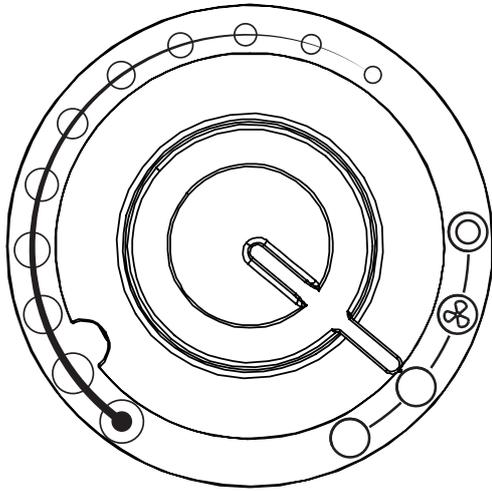

Turn the thermostat knob, without forcing it, to the maximum position. Adjust the desired heating power. Upon reaching the desired temperature, turn the thermostat anti-clockwise until switching off the appliance. The ambient temperature will be maintained automatically. To use the heater continuously, not controlled by the thermostat, turn the thermostat knob up to the maximum position.

## OSCILLATION

This appliance has an oscillation function that allows for 70° of movement. This appliance has an oscillation button located on the rear of the appliance. Press to begin oscillation.

## TIP-OVER SWITCH:

Your heater is designed to automatically shut the heater off when tipped forward or backward. The unit will automatically turn on once it is returned to its normal upright position.

## SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the heater will automatically shut off. It can only resume operation when the user resets the unit (see reset instructions below).
3. If the unit is tilted, a safety system automatically will cut off the power, put the unit in a vertical position and it will go on stand-by mode. Turn the unit on by pressing the POWER button and the unit will start operating again as per normal.

### To reset your heater:

1. Unplug the heater and wait between 5-10 minutes for the unit to cool down.
2. Then, turn on the unit again and operate normally.

## CLEANING & MAINTENANCE

### WARNING:



**ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING, DO NOT IMMERSE HEATER IN WATER!**

Clean the Air inlet and outlet regularly with a Vacuum Cleaner.. Clean the body of the heater with a soft damp cloth. Always make sure that the heater is completely dry before connecting back to the mains supply.

**CAUTION:** Do not use gasoline, benzene, thinner, harsh cleaners, etc. as they will damage the heater. NEVER use ALCOHOL OR SOLVENTS.

**STORAGE:** Store the heater with these instructions in the original packaging, in a cool, dry place.

### WARNING

This product should not be disposed of with household waste. Please recycle where facilities exist and check with your local authority for recycling advice.



## HINTS & TIPS

Where possible your electric heater should be connected to a power outlet that uses a separate 10 amp power circuit. This will avoid overloading your household fuse.

In the event that your household fuse is overloaded and trips, please note this is normally caused by the use of excessive power outlets at the same time your heater is operating (for example, a steam iron, kettle, toaster etc.). Please ensure to check the use of the power circuit and adjust when heater is in use (i.e. turn off the heater when boiling a kettle).

Should you still experience difficulty contact Omega Altise Service for assistance.

**It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference.**  
**Due to continual product development, Omega Altise reserves the right to alter specifications or appearances without notice.**  
**Dispose of packaging responsibly – recycle where facilities are available.**

A division of Shriro Australia Pty Ltd  
104 Vanessa St Kingsgrove NSW 2208  
In Australia: 1300 795 572  
In New Zealand: (09) 415 6000  
[www.omegaltise.com](http://www.omegaltise.com)

IM Ref: OAFH2000W

**omega**  
*altise*