

OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS

FOR OMEGA ALTISE PEDESTAL FAN




MODEL OP408B

omega
altise


IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: Read the safety precautions of this booklet carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your pedestal fan or these instructions, please contact Omega Altise on 1300 795 572 in Australia or (09) 415 6000 in New Zealand before operating your appliance.

1. Read all instructions carefully before using the pedestal fan.
2. Use this pedestal fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons. Do not modify this appliance. Do not try to repair this appliance – there are no user serviceable parts within.
3. Remove the packaging and ensure that the appliance is undamaged. In case of doubt do not use the appliance and contact Omega Altise Service. Do not let children play with any parts of the packaging.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the pedestal fan is used by or near children or individuals with decreased mental and physical capacity and whenever the pedestal fan is left operating unattended.
5. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home. The appliance must be connected to a grounded power supply.
6. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
7. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out.
8. Do not run power cords under rugs or other combustible materials. Do not place power cords in areas where they can be a tripping hazard. Do not operate directly below a power outlet.
9. Do not insert any objects into the appliance as it may cause an electric shock or fire or damage to the appliance. Do not block or tamper with the appliance in any manner while it is in operation. To prevent a possible fire, do not cover the appliance in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
10. Do not leave the appliance unattended. Always unplug the appliance when not in use. Take care that it is not obstructed when oscillating.

WARNING:  The Function Switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the appliance.

11. Keep materials such as hair, net curtains, tablecloths & clothes away from the openings of the pedestal fan, as material may be sucked into the appliance causing injury, damage to property or the appliance.
12. The appliance has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden, corrosive, salty or wet atmospheres. This appliance is intended for general indoor domestic use ONLY.
13. This appliance is not intended for use in wet or damp locations. Never locate it where it may fall into a bathtub or other water container.
14. Do not use the pedestal fan outdoors. Do not use close to windows or in direct sunlight.
15. Always place the appliance on flat, stable surfaces before use. Always place the appliance vertically on its base.
16. Ensure that the fan is switched off or unplugged from supply mains before removing the guard.


WARNING:  To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer, its Service Agent or similarly qualified persons in order to avoid a hazard. In order to avoid overheating, do not cover the appliance. Do not use the appliance in the immediate surrounding of a bath, shower or swimming pool.

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Omega Altise reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

TECHNICAL DETAILS AND PARTS

Model: OP408B Pedestal fan with remote control.
Power: 220-240V 50Hz, 60W.
Dimensions (H(max)×W×D): 1300×420×445mm

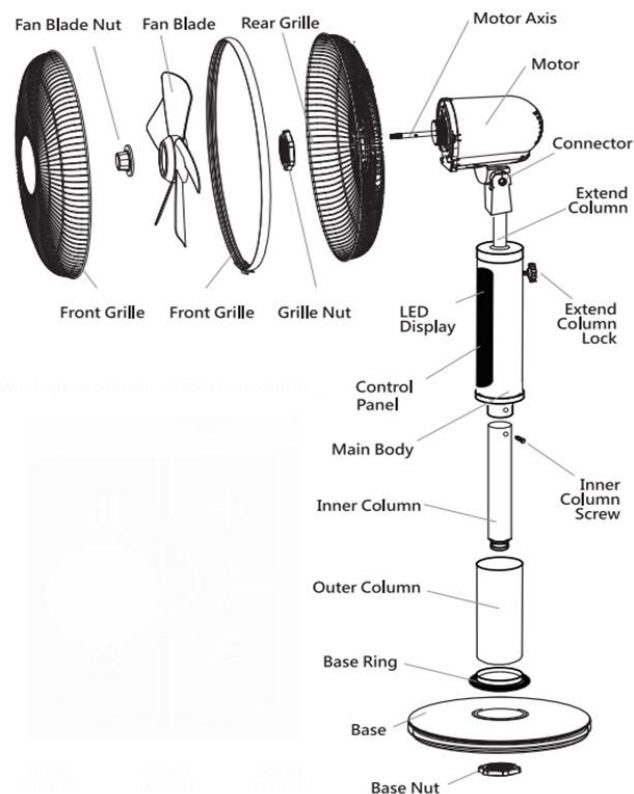

INSTALLATION

- Carefully remove the parts of the appliance from the plastic bags and the carton, and unwind the cord to its full length.
- Overturn the main body and insert the inner column.
- Turn to adjust the screw holes and lock by the inner column screw.
- Put the outer column and base ring on.
- Put the base and base nut on. Lock the base by turning the nut clockwise.
- Overturn the main body and place on a flat surface. Put the rear grille and grille nut in the motor axis. -Lock the rear grille by turning the nut clockwise.
- Put the fan blade on the motor axis.
- Fix it by fitting the concave area. Then put on and turn the blade nut anti-clockwise to lock the fan blade. Put the grille ring on the front grille with the lock downward.
- Pull and open the grille ring lock. Put the front grille with ring on the rear grille.
- After fitted the grilles, close the grille ring lock and install the grille ring lock screw to finish.

OPERATION

Place this appliance on a flat surface and connect to the power outlet. The display will show the current temperature (°C) and switch to standby mode. Press the power key once, this appliance will start operating in low speed with normal wind mode. The display will show "01"(speed) and "normal". And the display will show the current temperature & wind speed as cycle.

Wind speed setting

When operating, press the wind speed key can adjust the wind speed in 3 levels. And the display will show the wind speed: speed 01(low) - 02(medium) - 03(high) - 01(low) – cycle.

Mode setting: When operating, default using normal model. Press the mode key can adjust the wind mode as cycle.

Normal mode: keep operating at same wind speed.

Natural mode: auto adjust wind speed as rhythm to pretend natural wind.

Sleep mode: the fan will blow slowly and quietly, suitable for use during sleep.

Oscillation setting

This appliance can set individual up&down, left&right or 3D oscillation. Oscillation is off in default setting. Press the oscillation key can set this function as cycle.

Swing: null(no OSC) – left/right – up/down – 3D OSC – null(no OSC) - cycle

Timer setting

Max. 12hours timer is available. When operating. Press timer key can set the shutdown timer as cycle. The display will shown timer by hour. When the timer countdown finished, this appliance will stop operate and switch to standby mode.

Timer: null(no timer) – 01..... cycle

Manual adjust tilt-angle

Soft touch only is need to adjust the grille backward or pulling onward to the desired fan angle.
Before adjust the tilt-angle, please shutdown and unplug this appliance.

Manual adjust the column height

Make sure every parts are well installed before adjust the height. Hold the connector by hand, then loose the column lock by turning anti-clockwise.
Hold the column and lift/low the connector can adjust the height. Keep holding the connector after adjusted .Lock the extend column by turning the column lock clockwise.

Remote control

All the keys on the remote control correspond to the keys on the control panel
Open the back cover of remote control can replace the battery (2XAAA). Please remind the +/- direction of battery when replace.

Caution:

Battery should be keep out of reach of children.
If battery is swallowed accidentally, please consult a doctor for help immediately.
Do not recharge the battery to avoid accident.
Do not dispose the battery to heat source or nearby.
The battery should be storage in cool and dry place.

CLEANING & MAINTENANCE

WARNING:



ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING, DO NOT IMMERSE APPLIANCE IN WATER!

The fan should be cleaned periodically (at least once a month depending on the build-up of dust).

Clean the body of the pedestal fan with a soft damp cloth. Always make sure that the appliance is completely dry before connecting back to the mains supply.

CAUTION: Do not use gasoline, benzene, thinner, harsh cleaners, etc. as they will damage the pedestal fan. NEVER use ALCOHOL OR SOLVENTS.

Remove the front guard and take out the fan blades. Wash under water, rinse & dry. Replace fan blades and front guard. Do not disassemble the fan in any other manner.

WARRANTY

AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

Our Warranty

This product is also covered by the manufacturer's warranty set out in this document (**Our Warranty**). Our Warranty is for a period of **twenty-four (24)** months from the date of purchase. This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled under the Australian Consumer Law or the New Zealand Consumer Guarantee Act 1993 relating to this product.

Our Warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship. The product will be repaired or replaced at the option of Omega Altise.

OUR WARRANTY is subject to the following conditions:

1. That the purchaser contact Omega Altise prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations in their State when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed. If the appliance is used in commercial applications or for rental purposes, Our Warranty is limited to a warranty of twenty-four (24) months covering all parts with Three (3) months on any labour cost of service or repair.

WHAT IS COVERED: By Our Warranty:

During the warranty period, Omega Altise or its authorised Service Centre will at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

WHAT IS NOT COVERED: By Our Warranty:

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear e.g. cleaning, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non-genuine parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of lint, hair or dirt from within the appliance.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spill-overs, accidental damage or damage caused from cleaning products not recommended by Omega Altise.

HOW TO CLAIM OUR WARRANTY

Please refer to our website address below for Shriro Australia in Australia or Monaco Corp in New Zealand to register your warranty online. If you are contacting us regarding any warranty claims and spare part enquiries, please make sure you have the following information on hand:

1. Product Name/Model Number
2. Serial Number
3. Purchase Date (as per invoice, or proof of purchase)
4. Purchased from
5. Warranty Registration Number

IN AUSTRALIA

Omega Altise is a division of Shriro Australia Pty Ltd
ABN 28 002 386 129
Customer care: 1300 739 033
Email: customercare@shriro.com.au
Web: www.omegaltise.com.au

IN NEW ZEALAND

Omega Altise is a division of Monaco Corporation Ltd
(Member of Shriro Australia PTY LTD)
Phone (09) 415 6000
Email: customercare@monacocorp.co.nz
Web: www.omegaltise.com.au

