 


ASSEMBLY INSTRUCTIONS Figure 1 APPENDIX

Carefully turn the unit upside down and secure with the L shaped locking screw as shown in Figure 1.

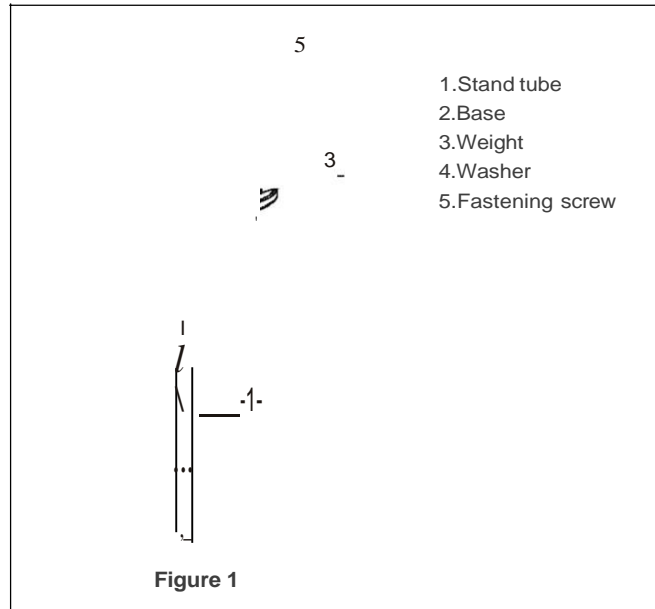

omega
altise

OP40R 40cm Remote Control Pedestal Fan



Instruction
Manual

Fan Direction Adjustment

1. Do not attempt to make any adjustment to the direction of the grille and fan assembly until the fan has been turned off and unplugged from the socket.
2. To adjust the direction of the fan, hold the grille and gently tilt the fan head until the desired position is reached.
3. Plug the fan back into the socket and turn the fan on.

Care and Maintenance

1. Always disconnect the cord from the electrical outlet when cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the fan occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
4. Avoid the use of gasoline, benzine, thinner etc as they may result in damage to the fan.
5. Store the fan in a clean dry place when not in use.



CAUTION! Do not immerse the fan in water or allow water to drip into the interior of the fan housing as this could create a fire or electric shock hazard.



WARNING! Do not attempt to open or repair the fan yourself. Doing so could void the warranty and cause damage or personal injury.

IN AUSTRALIA

Omega Altise is a division of Shriro Australia Ply Ltd
 ABN 28 002 386 129
 Locked Bag 5002, Kingsgrove, NSW, 2208
 Phone: 1300 795 572 Fax: 1800 686 413

Email: customer care@shriro.com.au
 Web: <http://www.omegaltise.com.au>

IN NEW ZEALAND

Omega Altise is a division of Monaco Corporation
 (Member of Shriro Australia Ply Ltd)
 PO Box 4399, Shortland St, Auckland, 1140
 Phone: 09 415 6000 Fax: 09 415 7060

Email: servicesupport@monaco.co.nz
 Web: <http://www.omegaltise.com.au>

Important Safety Instructions

1. Read all instructions.
2. Disconnect the power plug before dismantling, assembling or before cleaning.
3. Avoid touching mobile parts of the fan.
4. Make sure the fan is on a dry and even surface.
5. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while running.
6. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with the appliance.
7. Do not use the appliance for any other purpose than its intended use.
8. The fan must not be used if the guards are not fastened according to instructions.
9. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
11. Ensure that the fan is switched off from the supply mains before removing the guard.

Read all instructions before using this unit. Keep them for future reference.

Specifications

Model	OP40R
Rated Voltage	230-240V/50Hz
Watts	50W
Dimensions (h x w x d) mm	1280H x 440W x 400D
Controls	Electronic/ Remote

Settings	3 speed, timer-off
Fan blade size	40cm
Tilt action	Tilting fan head
Oscillation	Oscillating fan head

Assembly Instructions

1. Remove all items of packaging from the fan.
2. Insert the pedestal tube into the base plate. Carefully turn the unit upside down and secure with the L shaped locking screw as shown in Figure 1. Return to an upright position.
3. Loosen the height adjustment ring and extend the support pole. Initially the support pole will be held tightly in place. If necessary, use a pair of pliers to grasp the support pole and pull it into position.
4. Retighten the height adjustment ring to prevent slipping, then place the fan assembly (control panel and motor casing) onto the pole and tighten the pole locking screw manually. Do not over tighten.
5. Remove the blade cap from the motor shaft by turning it clockwise. Then remove the locking nut by turning it anti-clockwise.
6. Place the rear grille into position, ensuring that it is aligned with the locating lugs (see Figure 2). If this is done correctly, the carry handle on the grille will be at the top.
7. Fix the grille into position by replacing the rear grille locking nut tightly by hand. Do not force the locking nut (see Figure 2).
8. The groove in the centre of the fan blade aligns with the T-bar on the motor shaft to ensure it is positioned correctly.
9. Fix the blade into place by gently hand tightening the blade cap onto the motor shaft in an anti-clockwise direction (see Figure 3). Do not over tighten.
10. Open all locking clips on the front grille (see Figure 4).
11. Place the front grille into position and secure it by fastening the clips over the outer rim. The small screw and nut at the bottom of the grille must be fitted for additional safety. (see Figure 5).

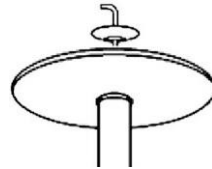 


Figure 1.

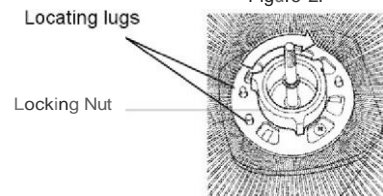 


Figure 2.

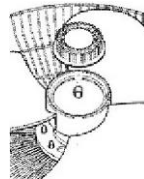 


Figure 3.



Figure 4.

 


Figure 5.

Operating Instructions

1. Use in a dry place, free of excessive humidity and water.
2. When connected to the power the Power LED on the fan control panel will glow.
3. This unit can be operated by the control panel on the fan or by remote control in the same manner. The corresponding LED on the fan control panel will be illuminated according to your selection.

ON/OFF: Will turn the fan on and off. The fan will start in NORMAL mode and LOW fan speed will be selected.

SPEED: Selects the speed of the fan from LOW, MEDIUM and HIGH.

MODE: There are three types of airflow that can be selected:

1. Normal mode is usual fan function airflow and can be combined with the 3 fan speeds as desired.
2. Natural mode can be selected in combination with the 3 fan speeds, **which the fan speed will alternate between High, Medium and Low speeds.**
3. Sleep mode when combined with the 3 fan speeds will:
 - a. When HIGH is selected the fan will operate at High fan speed **for 30 minutes, then off for ?? second?/minute?**, then Medium fan speed **for 30 minutes, then High fan speed for 30 minutes, then Low fan speed** for the remaining time.
 - b. When MEDIUM is selected the fan will operate at **Low fan speed for 30 minutes, then Medium fan speed for 30 minutes, then Low fan speed for 30 minutes, then High fan speed for 30 minutes, then off.**
 - c. When LOW is selected the fan will operate on **Low fan speed for 30 minutes, then off for ?? second?/minute?**, then Medium fan speed for 30 minutes, then Low fan speed for 30 minutes, then Medium fan speed for 30 minutes, then off.

TIME: Pressing the time key will activate the timer-off function. Each time the key is pressed the timer will be increased by 30mins up to a maximum of 7.5 hours. When the timer reaches the set time the fan will stop automatically.

OSC: The oscillation button will start the fan oscillating. Press again for fixed operation.

